

Glass Rod Console Leg Installation Instructions (with or without Towel Bar)

Please provide these instructions to contractor at point of sale.

This support is designed to be used with Vitraform glass Counters and Countersinks. It may be ordered for counter height up to 36" (120 to 915mm), adjustable to +/- 1/4" (6mm).



The Glass Rod Console Leg supports Vitraform Counters at the front in combination with Vitraform Surface Clips (see pg. B.2.7), Vitraform Flush Clips (see pg. B.2.8) or Vitraform U-Channel (see pg B.2.12) to support the back. Optional Towel Bar hardware is offered to be used with this installation. Drawings for approval are provided by the factory to coordinate glass and hardware components for planning and installation.

The Glass Rod Console Leg is permanently assembled with both End Caps at factory and will not need any alterations in the field. A Leveler is provided for minor adjustment.

INSTALL Counter to the back wall according to the instructions for the Vitraform support fitting selected. Temporarily support the front, outer edges of the Counter using a piece or pieces of wood cut to the appropriate length.

Installation of Console leg:

1. With the **Plastic Washer** and **Plastic Bushing** assembled on the **Decorative Cap Screw**, insert into 1/2" hole in **Counter** provided for leg. Place the second **Large Plastic Washer** over the end of the **Decorative Cap Screw** against the bottom of the **Counter**. Thread **Upper Cap** of **Glass Rod Console Leg** onto **Decorative Cap Screw**.
2. Adjust **Foot Levelers** at the bottom of **Glass Rod Console Legs** to their approximate correct length, lightly supporting the **Counter** and check leg with bubble level to make sure it is in plumb on two axis. Remove temporary support and check that counter is flat with bubble level and adjust accordingly.
3. Accurately mark the point on the floor where the **Levelers** are sitting. Have an assistant gently lift the outboard side of the Counter up enough to place a dime-size dab of **Clear Silicone** on mark on floor and then lower Counter and allow Glass Rod Legs to support Counter, again making sure they are plumb. Allow Clear Silicone to set for 24 hours and then remove any excess using a single-edged razor blade and denatured alcohol.
4. Installation of pre-assembled **Glass Towel Bar** (optional). If Glass Towel Bar is ordered with the Glass Rod Console Leg, it will come pre-assembled. Install using supplied hardware as indicated on 1/2" holes on Counter using **Plastic Bushings** and **Washers**.

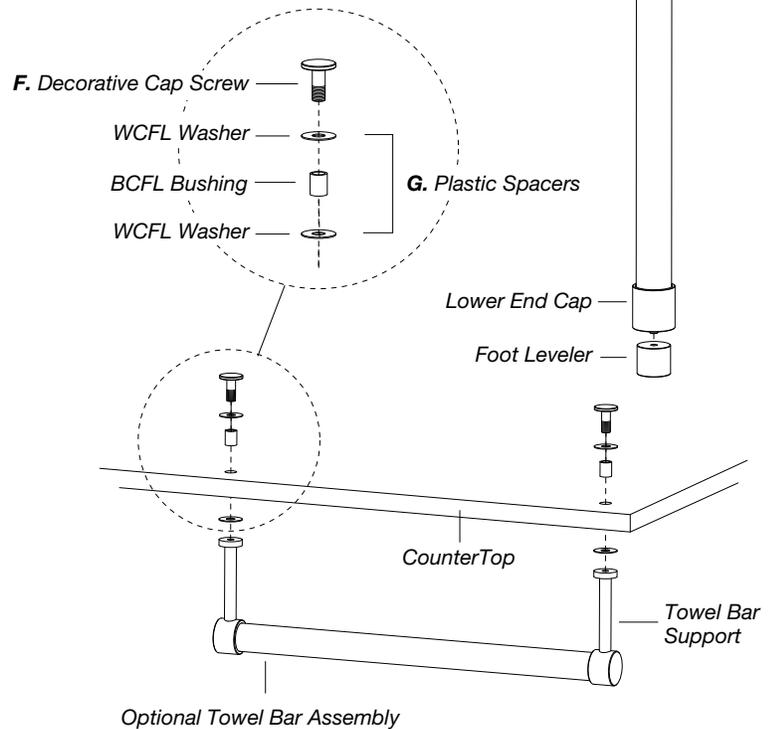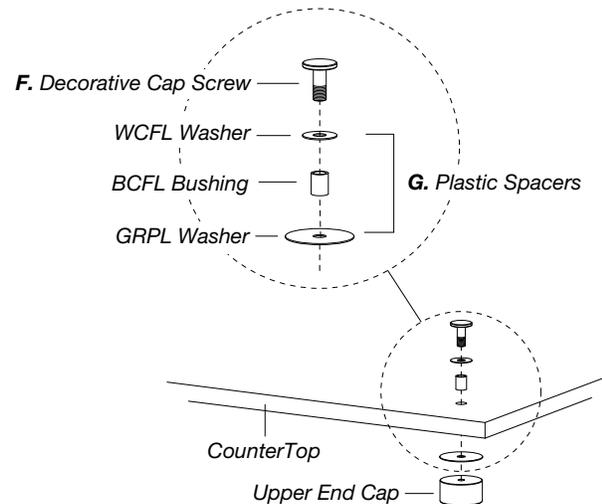

Care for the Vitraform Glass Sink: Use commercial glass cleaners sprayed onto a soft cloth to clean glass surface(s). Wipe basin dry after use to avoid mineral deposits on glass left by water spots. For frosted glass, special attention to stubborn stains or adhesives may be required. Silicone or other adhesives may be impossible to remove from frosted finishes. If contamination occurs attempt to remove adhesive with glass cleaner first, then denatured alcohol, paint thinner or mineral spirits. If none of these solvents work, the stain might be removed by re-blasting the bowl. Contact the factory for authorization to return the product for evaluation. A return authorization must accompany the product. Please pack the sink in the original box or other proper packing to assure its safe return and insure for full value.

Care for metal fittings and plated finishes: Wipe metal fittings dry after use to avoid water spots. Glass cleaner used on the Vitraform Glass Sink may be damaging to metal finishes. Use a diluted, neutral, liquid soap and a soft cloth to clean metal fittings. Never use an abrasive cloth or scouring pad.