

Countersink with or without Overflow: All Countersinks (Items 300-453 and 370)

Please provide these instructions to contractor at point of sale.

CAUTION: This sink is made of glass. It is very strong, but sensitive to hard object impact, extreme change in temperature and high mechanical stress. Most damage to this product occurs during installation. Please follow installation instructions carefully.

VITRAFORM sinks are intended and Warranteed for Lavatory use only.

Drain Installation

See Hardware pgs B.1.1.a - B.1.4.a for instructions on installing Vitraform drain systems with this basin.

Choice of Installation with or without Overflow

Overflow: hardware supplied

A. Rubber Sink Grommet
B. Overflow Nipple
C. Hex Tool
E. Rubber Washers
F. Lower Collar
G. O-ring

D. Upper Tube

Overflow Installation

- 1. Insert lip of Rubber Sink Grommet $\boldsymbol{\mathsf{A}}$ into drain hole of sink.
- Insert Overflow Nipple B and Rubber Washers E into overflow hole of sink and partially start threads into Upper Tube D while aligning Lower Collar F with Rubber Sink Grommet A.
- 3. Using Hex Tool C lightly tighten Overflow Nipple B.


Collar: hardware supplied

- H. Rubber Sink Grommet
- I. Collar

Collar Installation

- 1. Insert lip of Rubber Sink Grommet H into drain hole of sink.
- 2. Mate Overflow Collar I with Rubber Sink Grommet H.

Intructions for Round, Oval and Rectangular basins. Illustration shown with round integral basin.

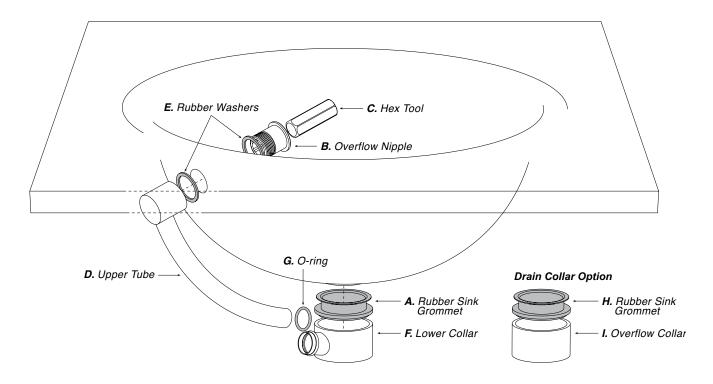

Care for the Vitraform Glass Sink: Use commercial glass cleaners sprayed onto a soft cloth to clean glass surface(s). Wipe basin dry after use to avoid mineral deposits on glass left by water spots. For frosted glass, special attention to stubborn stains or adhesives may be required. Silicone or other adhesives may be impossible to remove from frosted finishes. If contamination occurs attempt to remove adhesive with glass cleaner first, then denatured alcohol, paint thinner or mineral spirits. If none of these solvents work, the stain might be removed by re-blasting the bowl. Contact the factory for authorization to return the product for evaluation. A return authorization must accompany the product. Please pack the sink in the original box or other proper packing to assure its safe return and insure for full value.

Care for metal fittings and plated finishes: Wipe metal fittings dry after use to avoid water spots. Glass cleaner used on the Vitraform Glass Sink may be damaging to metal finishes. Use a diluted, neutral, liquid soap and a soft cloth to clean metal fittings. Never use an abrasive cloth or scouring pad.